

***BOSE***

---

**SOUNDLINK HOME** *BLUETOOTH®* SPEAKER

## Please read and keep all safety and use instructions.

### Important Safety Instructions

Do not use this apparatus near water.

Clean only with a dry cloth.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### WARNINGS/CAUTIONS



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Use this product only with an agency-approved LPS power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- The battery provided with this product may present a risk of fire, explosion or chemical burn if mishandled, incorrectly replaced or replaced with an incorrect type.
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- Due to ventilation requirements, Bose does not recommend placing the product in a confined space such as in a wall cavity or in an enclosed cabinet.
- Do not place or install near any heat sources, such as fireplaces, radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between radiator and your body.

CAN ICES-3(B)/NMB-3(B)



Names and Contents of Toxic or Hazardous Substances or Elements										
	Toxic or Hazardous Substances and Elements									
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (Cr(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)	Dybutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)	Butyl benzyl phthalate (BBP)	Bis(2-ethylhexyl)phthalate (DEHP)
PCBs	X	O	O	O	O	O	O	O	O	O
Metal Parts	X	O	O	O	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O	O	O	O	O
Speakers	X	O	O	O	O	O	O	O	O	O
Cables	X	O	O	O	O	O	O	O	O	O
This table is prepared in accordance with the provisions of SJ/T 11364.										
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.										
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.										

**Date of Manufacture:** The eighth digit in the serial number indicates the year of manufacture; "4" is 2014 or 2024.

**Importers:** Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100

**Model:** 443696. The CMIIT ID is located on the bottom of the speaker.

**The Bose Terms of Use** apply to this product: [worldwide.bose.com/termsfuse](https://www.bose.com/termsfuse)

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Bose, the B logo, and SoundLink are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2024 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

---

### **Please complete and retain for your records**

The serial number and model number are located on the bottom of the speaker.

Serial number: \_\_\_\_\_

Model number: 443696

Please keep your receipt. Now is a good time to register your Bose product. You can easily do this by going to [worldwide.Bose.com/ProductRegistration](https://worldwide.Bose.com/ProductRegistration)

---

The following license disclosures apply to certain third-party software packages used as components in the product.

Package: µGUI - Generic GUI module

Copyright © 2015 Achim Döbler

This is a free software that is open for education, research and commercial developments under license policy of following terms. The µGUI module is a free software and there is NO WARRANTY. No restriction on use.

URL: <http://www.embeddedlightning.com/>

Package: Zephyr OS

Copyright © Zephyr Project

The above is/are subject to the license terms reprinted below:

### **Apache License**

Version 2.0, January 2004

<http://www.apache.org/licenses/>

### **TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION**

#### **1. Definitions.**

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. **Grant of Copyright License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. **Grant of Patent License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. **Redistribution.** You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
  - a. You must give any other recipients of the Work or Derivative Works a copy of this License; and
  - b. You must cause any modified files to carry prominent notices stating that You changed the files; and
  - c. You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
  - d. If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License. You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.
5. **Submission of Contributions.** Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
6. **Trademarks.** This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. **Disclaimer of Warranty.** Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
8. **Limitation of Liability.** In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts)

or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

9. **Accepting Warranty or Additional Liability.** While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

## WHAT'S IN THE BOX

Contents .....	11
----------------	----

## GETTING STARTED

Initial setup .....	12
---------------------	----

## BLUETOOTH CONNECTIONS

Connect to a device.....	14
Reconnect to a device .....	15
Reconnect to the most recently-connected devices.....	15
Reconnect to a different device.....	15
Connect an additional device.....	15
Switch between two connected devices.....	15
Disconnect a device .....	16
Clear the speaker device list.....	16

## SPEAKER PLACEMENT

Recommendations.....	17
----------------------	----

## SPEAKER CONTROLS

Power on/off.....	18
Auto-off timer.....	19
Media playback and volume .....	20
Phone calls .....	21
Access voice control.....	22



## BATTERY

Charge the speaker.....	23
Charging time.....	24
Hear the battery level.....	24
Battery protection mode.....	24

## STATUS

Power light.....	25
<i>Bluetooth</i> light.....	26

## VOICE PROMPTS

Pre-installed languages.....	27
Change the language.....	27
Disable voice prompts.....	27

## WIRED CONNECTIONS

Connect to a USB audio source.....	28
Switch between a USB audio source and a <i>Bluetooth</i> device.....	28

## CONNECT BOSE PRODUCTS

Connect two speakers in Stereo mode.....	29
Connect the speakers.....	29
Identify the left and right speakers.....	30
Reconnect the speakers.....	31
Disconnect the speakers.....	31
Clear the speaker connection.....	31

## CARE AND MAINTENANCE

 
Clean the speaker .....	32
Store the speaker .....	32
Replacement parts and accessories.....	32
Limited warranty .....	32

## TROUBLESHOOTING


Try these solutions first.....	33
Other solutions .....	33
Reset the speaker .....	36
Restore the speaker.....	37

## CONTENTS

Confirm that the following parts are included:

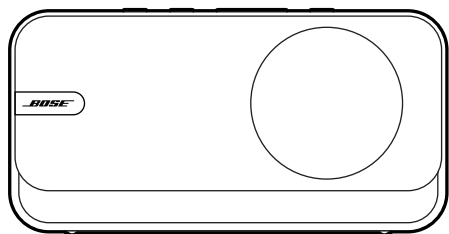

Bose SoundLink Home *Bluetooth* Speaker

 


USB Type-C® to USB Type-A cable

**NOTE:** If any part of your product appears to be missing or damaged, don't use it. Visit [support.bose.com/sl-home](https://support.bose.com/sl-home) for troubleshooting articles, videos, and product repair or replacement.


The speaker ships with a partial charge. Before using the speaker for the first time, connect it to a power supply. The speaker doesn't need to be fully charged, but it does require the initial connection to activate the battery.

## INITIAL SETUP

 1. Connect the USB-C® end of the cable to the USB-C port on the left side of the speaker.

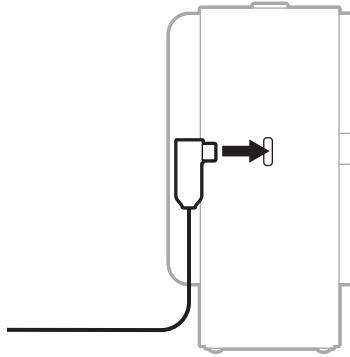


 2. Connect the USB-A end of the cable to a USB-A power supply.

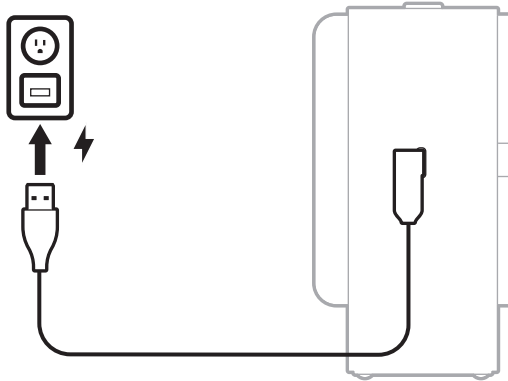

3. Press the Power button .

 The Power light glows solid white, and the *Bluetooth* light blinks blue.

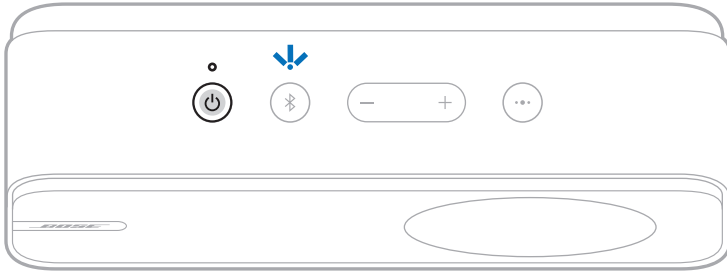


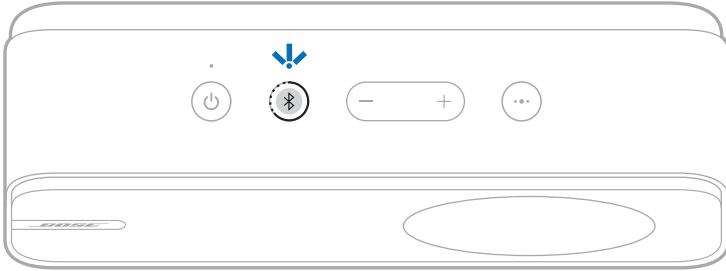 
A voice prompt announces the battery level, and then you hear "Ready to connect."

4. Connect to your device (see page 14).

You can store up to eight devices in the speaker device list, and the speaker can be actively connected to up to two devices at a time. You can play audio from only one device at a time.


## CONNECT TO A DEVICE

 1. Press and hold the *Bluetooth* button  until you hear “Ready to connect” and the *Bluetooth* light blinks blue.



**NOTE:** If a device is already connected, you hear “Ready to connect another device.”

2. On your device, access *Bluetooth* settings.
3. Select the speaker from the list of available products.

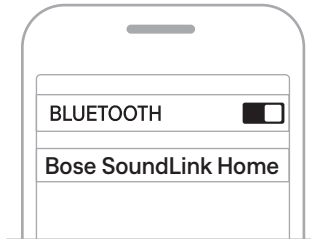

The speaker appears in the list of connected products. The *Bluetooth* light glows solid blue (see page 26).

## RECONNECT TO A DEVICE

### Reconnect to the most recently-connected devices

When powered on, the speaker connects to the two most recently-connected devices.

#### NOTES:

- The devices must be within range (30 ft or 9 m) and powered on.
- Make sure the *Bluetooth* feature is enabled on your devices.
- If the speaker is connected to a USB audio source when powered on, it doesn't reconnect to any *Bluetooth* devices. To reconnect to a device, use the device *Bluetooth* settings.

### Reconnect to a different device

To reconnect to a different previously-connected device, use the device *Bluetooth* settings.

#### NOTES:

- The device must be within range (30 ft or 9 m) and powered on.
- If two devices are already connected to the speaker, you must disconnect one of them before reconnecting a third previously-connected device.

## CONNECT AN ADDITIONAL DEVICE

The speaker can be actively connected to two devices at a time (multi-point connection).

To connect an additional device, see page 14.

#### NOTES:

- You can only play audio from one device at a time.
- If two devices are already connected to the speaker, the newly-connected device replaces the older of the two connections.

## SWITCH BETWEEN TWO CONNECTED DEVICES


1. Pause audio on your first device.
2. Play audio on your second device.

 
## DISCONNECT A DEVICE

Use the device's *Bluetooth* settings.

**NOTE:** Disabling the *Bluetooth* feature on your device disconnects the speaker and all other *Bluetooth*-connected products.

## CLEAR THE SPEAKER DEVICE LIST

1. Press and hold the *Bluetooth* button  for 10 seconds until you hear “*Bluetooth* device list cleared” and the Power light blinks white twice.

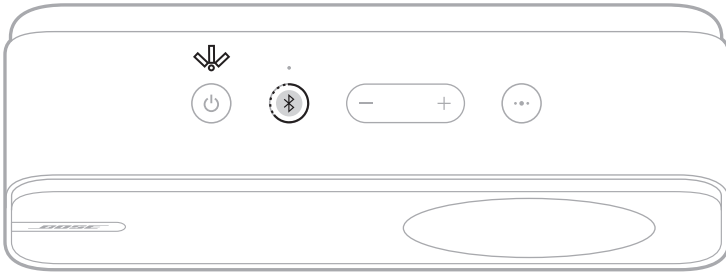

The *Bluetooth* light blinks blue.

2. Delete the speaker from your device's *Bluetooth* settings.

All devices are cleared, and the speaker is ready to connect (see page 14).




## RECOMMENDATIONS

 - Place the speaker so that the rubber base is on a stable and level surface.
- Do NOT place the speaker on top of audio/video equipment (receivers, TVs, etc.), or any other object that may generate heat. Heat generated by these items may result in poor speaker performance.
- For best sound quality, keep the speaker at least 0.25 in (6.4 mm) away from walls or nearby surfaces.
- To avoid wireless interference, keep other wireless equipment at least 1 – 3 ft (0.3 – 0.9 m) away from the speaker.
- Place your device within 30 ft (9 m) of the speaker, and make sure there is a clear line of sight between it and the speaker. Moving your device farther away or not having a clear line of sight may impact sound quality, and your device may disconnect from the speaker.

**CAUTION:** Stand the speaker on its base. Standing the speaker on any other side may cause damage to the speaker and affect sound quality.


Controls are located on the top of the speaker.

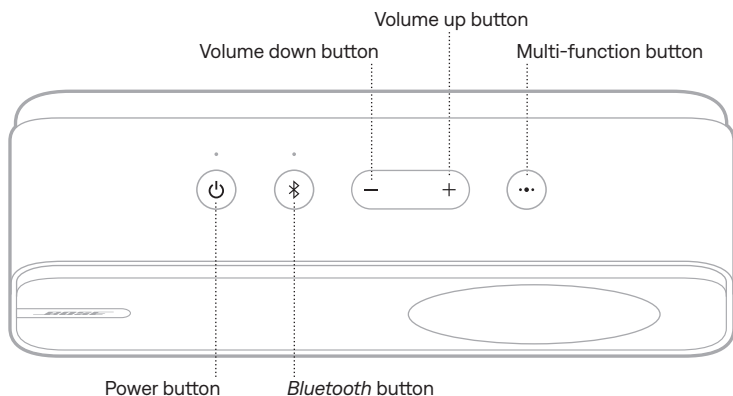

## POWER ON/OFF

Press the Power button .

 When powered on, a voice prompt announces the battery level. The Power light glows according to the current battery level (see page 25).

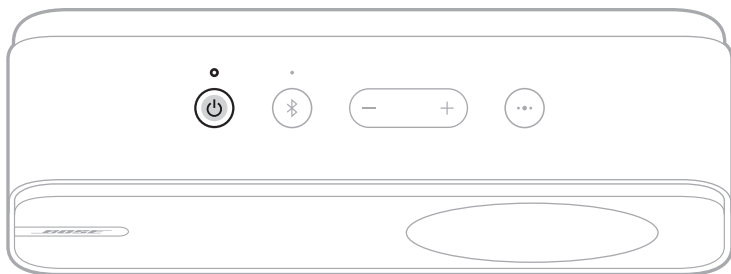



## **Auto-off timer**

The auto-off timer conserves the battery when the speaker is operating on battery power. The speaker switches off when audio has stopped and buttons have not been pressed for 20 minutes.

 
To wake the speaker, press the Power button .

## **Disable the auto-off timer**

Press the Multi-function button  and the Volume up button  simultaneously. You hear "Auto-off disabled."

Repeat to re-enable the auto-off timer.


## MEDIA PLAYBACK AND VOLUME

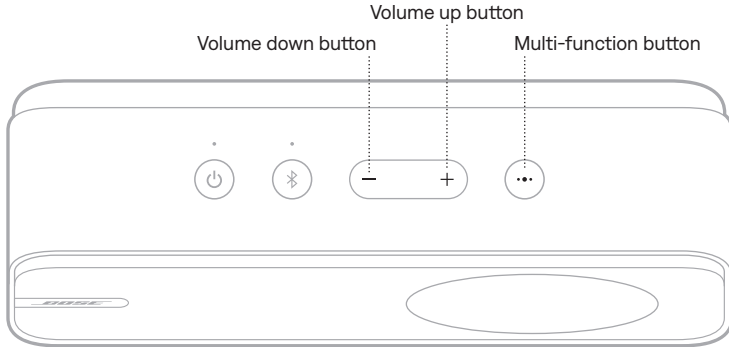

FUNCTION	WHAT TO DO
<b>Play/Pause</b>	Press ••.
<b>Skip forward</b>	Double-press ••.
<b>Skip backward</b>	Triple-press ••.
<b>Volume up</b>	Press +.  <b>NOTES:</b> <ul style="list-style-type: none"> <li>To quickly increase the volume, press and hold +.</li> <li>When the maximum volume is reached, the Power light blinks white 2 times and you hear a tone.</li> </ul>
<b>Volume down</b>	Press —.  <b>NOTES:</b> <ul style="list-style-type: none"> <li>To quickly decrease the volume, press and hold —.</li> <li>When the minimum volume is reached, the Power light blinks white 2 times and you hear a tone.</li> </ul>

**TIP:** You can also increase or decrease the volume using the volume controls on your device.

## PHONE CALLS

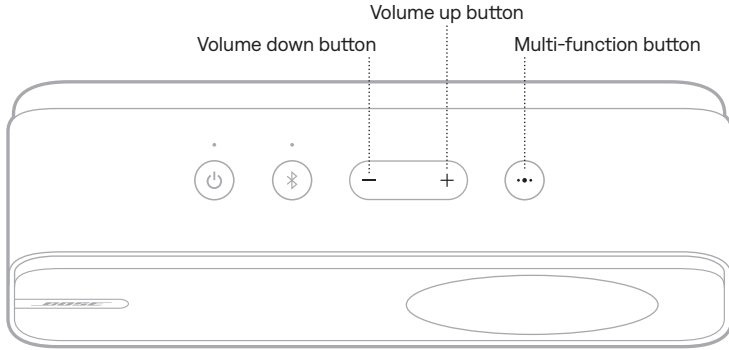 


FUNCTION	WHAT TO DO
<b>Answer/End a call</b>	Press ••.
<b>Decline an incoming call</b>	Press and hold ••.
<b>Answer a second incoming call and put the current call on hold</b>	While on a call, press ••.
<b>Decline a second incoming call and stay on the current call</b>	While on a call, press and hold ••.
<b>Switch between two calls</b>	With two active calls, press •• twice quickly.
<b>Access voice control to make a call</b>	While not on a call, press and hold ••. Your device may not support voice control. Refer to your device owner's guide for more information.
<b>Mute/Unmute a call</b>	While on a call, press •• and — simultaneously.

## ACCESS VOICE CONTROL

 The speaker microphone acts as an extension of the microphone in your device. Using the Multi-function button ●● on the speaker, you can access the voice control capabilities on your device to make calls or access your voice assistant to play music, tell you the weather, give you the score of a game, and more.


Press and hold ●● to access voice control on your device. You hear a tone that indicates voice control is active.

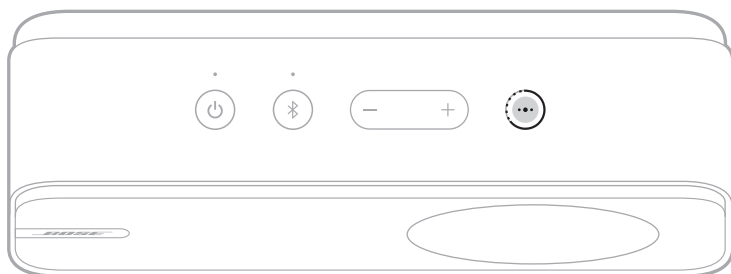


## CHARGE THE SPEAKER

**NOTE:** Only use the provided USB cable. Bose recommends using a 5V  $\overline{\text{---}}$ , 1.5A capable power source.

 1. Connect the USB-C end of the cable to the USB-C port on the left side of the speaker.

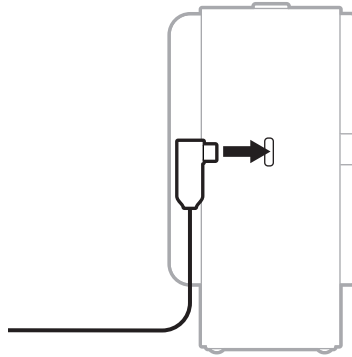

 2. Connect the USB-A end of the cable to a power source such as a computer or wall charger.

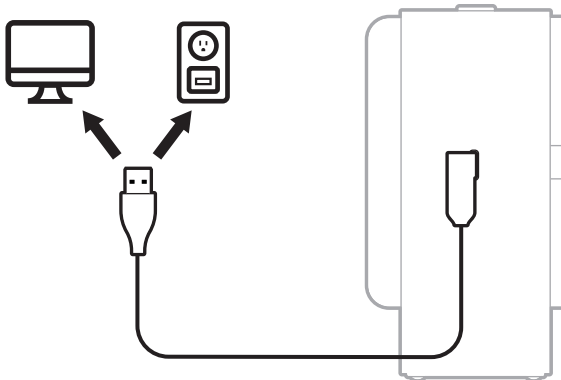

If the speaker is powered off, the Power light glows amber and you hear a tone. When the battery is fully charged, the Power light turns off.

If the speaker is powered on, the Power light slowly blinks white and you hear a tone. When the battery is fully charged, the Power light glows solid white.

## Charging time


Allow up to 4 hours to fully charge the battery.<sup>1</sup>

A full charge powers the speaker up to 9 hours.<sup>2</sup> At maximum volume, the battery lasts up to 2.5 hours.<sup>3</sup>

 
Charging time and battery performance vary with the USB power supply capability, music content, and speaker volume.

## Hear the battery level

Each time you power on the speaker, a voice prompt announces the battery level. When the speaker is in use, a voice prompt announces if the battery needs to be charged.

While using the speaker, press and hold the Power button  until you hear a voice prompt announce the battery level.

## Battery protection mode

When the speaker battery is depleted (0%), or the speaker is unplugged and unused for more than three days with a remaining charge of less than 10%, it enters battery protection mode. To reactivate the speaker, connect it to a power supply and press the Power button .

When not in use, store the speaker in a cool place.

**CAUTION:** Do NOT store the speaker for extended periods when fully charged or with a remaining charge of less than 10 percent.

 
---

All tests conducted by Tonly Technology Co., Ltd. with production-representative Bose SoundLink Home *Bluetooth* Speaker, between 68° F – 77° F (20° C – 25° C).

- 1 With 5V/1.5A (7.5W) power supply, from 0% to 100% while unit is powered off. Charging times will vary when not using the recommended 7.5W supply.
- 2 Using *Bluetooth* A2DP audio at 50% volume, using a mix of Top 50 Global tracks as of February 2024. Battery performance varies with individual user conditions such as audio content, loudness, and environmental temperature.
- 3 Using *Bluetooth* A2DP audio at 100% volume, using a mix of Top 50 Global tracks as of February 2024. Battery performance varies with individual user conditions such as audio content, loudness, and environmental temperature.




The Power and *Bluetooth* lights are located on the top of the speaker.

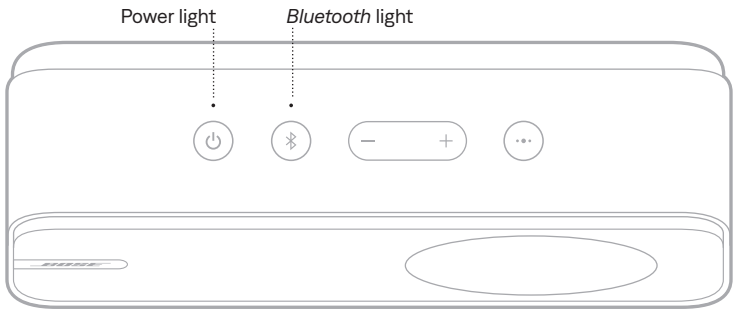

## POWER LIGHT

Shows the battery, charging, speaker device list, and error status.

LIGHT ACTIVITY	SYSTEM STATE
<b>Solid white</b>	Battery level 20 – 100%.
<b>Solid white while connected to power</b>	Fully charged.
<b>Solid amber</b>	Powered off and charging.
<b>Blinks white</b>	Battery level 1 – 19%.
<b>Slowly blinks white</b>	Powered on and charging.
<b>Blinks white 2 times</b>	Device list cleared.
<b>Quickly blinks amber (3 seconds) when the Power button  is pressed</b>	Battery level too low to power on.
<b>Quickly blinks amber while connected to power</b>	<p>Battery error - disconnect the USB cable from the speaker.</p> <p>If the speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again.</p>
<b>Quickly blinks white 3 times</b>	Restore complete.

## **BLUETOOTH LIGHT**

Shows the *Bluetooth* connection status.

LIGHT ACTIVITY	SYSTEM STATE
Blinks blue	Ready to connect
Quickly blinks blue	Connecting
Solid blue	Connected

Voice prompts guide you through the *Bluetooth* connection process, announce the battery level, and announce changes to speaker settings.

## PRE-INSTALLED LANGUAGES

The following languages are pre-installed on the speaker:

- English
- French
- Mandarin
- Japanese

## CHANGE THE LANGUAGE

When you power on the speaker for the first time, the voice prompts are in English.

1. Press and hold the Multi-function button ••• and the Volume up button + simultaneously until you hear the voice prompt for the first language option.
2. Press + or the Volume down button — to move through the list of languages.
3. When you hear your language, press and hold •• until you hear a tone.

## DISABLE VOICE PROMPTS

 
Press and hold ••• and — simultaneously until you hear “Voice prompts off.”

**NOTE:** Repeat to re-enable voice prompts.


## CONNECT TO A USB AUDIO SOURCE

You can connect the speaker to a computer or other USB audio source to play audio through the USB cable.

1. Connect the USB-C end of the cable to the USB-C port on the left side of the speaker.

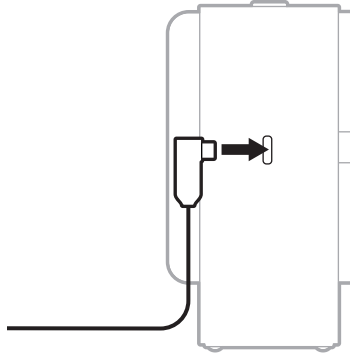

 2. Connect the USB-A end of the cable to a computer or other USB audio source.

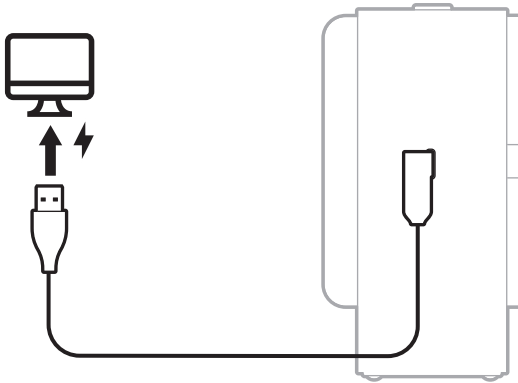

If the speaker is powered on, you hear “USB audio.”

**NOTE:** You may need to select the speaker as the audio output device in your USB audio source's settings.

## Switch between a USB audio source and a *Bluetooth* device

1. Pause audio on your first device.
2. Play audio on your second device.

## CONNECT TWO SPEAKERS IN STEREO MODE



For a more immersive music experience, you can connect two Bose SoundLink Home *Bluetooth* Speakers together and play the same song from both speakers in stereo.

 
You can play stereo audio from either a *Bluetooth* device or USB audio source connected to the primary speaker.


### NOTES:


- During Stereo mode, the primary speaker can be connected to only one device at a time. If two devices are connected when Stereo mode is enabled, the older of the two connections is disconnected.
- When Stereo mode is enabled, any devices connected to the secondary speaker are disconnected.
- If you receive a call on your connected device during Stereo mode, the call audio plays only from the primary speaker.
- During Stereo mode, powering off either speaker causes the other to power off as well.

### Connect the speakers

1. Make sure both speakers are powered on (see page 18).
2. Make sure one speaker is connected to your device or USB audio source. This will be the primary speaker.
3. On the speaker connected to your device or USB audio source, press and hold the *Bluetooth* button  and the Volume up button  simultaneously until you hear "Press the *Bluetooth* and volume down buttons simultaneously on a second Bose device."

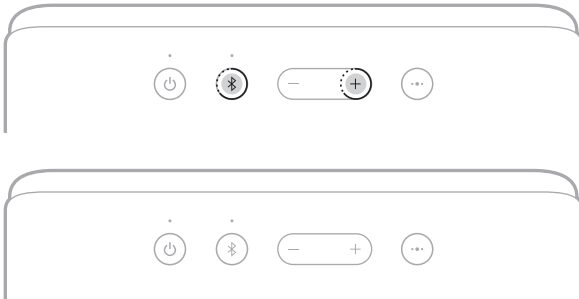

 4. On the other speaker, press and hold the *Bluetooth* button  and the Volume down button — simultaneously until you hear a tone.

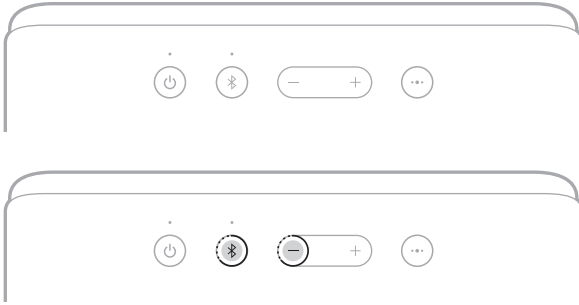


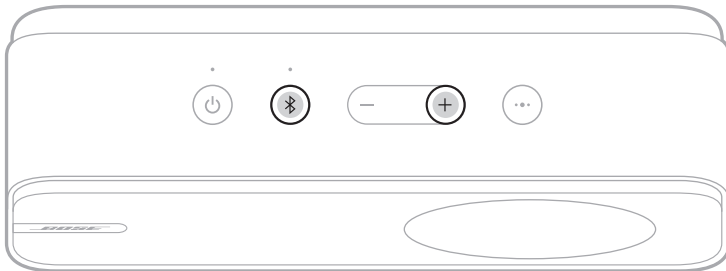 
You hear “Stereo mode,” followed by “Left” on the primary speaker and “Right” on the secondary speaker.

5. For the best experience, position the speakers:
- In the same room or outdoor area
  - Within 10 ft (3 m) of each other, free from obstructions
  - Facing toward you
  - So that your distance to each speaker is equal

**NOTE:** Performance may vary based on device, distance, and environmental factors.

### Identify the left and right speakers

To check whether a speaker is the primary speaker (left) or the secondary speaker (right), press the *Bluetooth* button  and the Volume up button + simultaneously on the speaker.



You hear “Stereo mode,” followed by either “Left” or “Right.”

## Reconnect the speakers

When either speaker is powered on, it reconnects to the most recently-connected speaker.



**NOTE:** The other speaker must be within range (30 ft or 9 m) and powered on.

 
## Disconnect the speakers

Power off one of the speakers to disconnect them (see page 18).

## Clear the speaker connection

Clearing the speaker connection causes the speakers to no longer reconnect to each other when powered on.

1. Make sure both speakers are powered on (see page 18).
2. On one of the speakers, press and hold the *Bluetooth* button  and the Volume up button  simultaneously until you hear "Bose speakers unlinked."

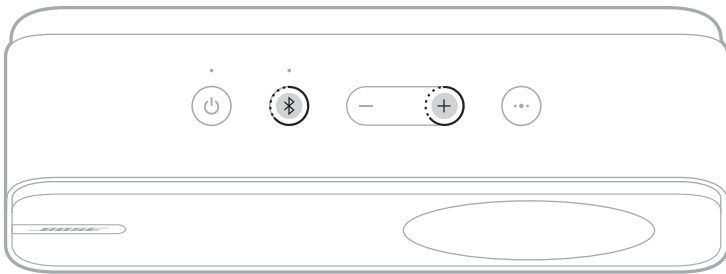

The speakers are disconnected and the speaker connection is cleared.

**TIP:** You can also clear the speaker connection by clearing the speaker device list on either speaker (see page 16).

## CLEAN THE SPEAKER

Wipe the surface of the speaker with a soft, dry cloth.

### CAUTIONS:

- Do NOT use any sprays near the speaker.
- Do NOT use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do NOT allow liquids to spill into any openings.

## STORE THE SPEAKER

When not in use, store the speaker in a cool place.

**CAUTION:** Do NOT store the speaker for extended periods when fully charged or with a remaining charge of less than 10 percent (see page 25).

## REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: [support.Bose.com/sl-home](https://support.Bose.com/sl-home)

## LIMITED WARRANTY

The speaker is covered by a limited warranty. Visit our website at [worldwide.Bose.com/Warranty](https://worldwide.Bose.com/Warranty) for details of the limited warranty.

To register your product, visit [worldwide.Bose.com/ProductRegistration](https://worldwide.Bose.com/ProductRegistration) for instructions. Failure to register will not affect your limited warranty rights.



## TRY THESE SOLUTIONS FIRST

If you experience problems with the speaker:

- Power the speaker off and then on again (see page 18).
- Charge the speaker (see page 23).
- Check the status lights (see page 25).
- Increase the volume on the speaker, your device, and your music app.
- Move your device closer to the speaker (30 ft or 9 m) and away from any interference or obstructions.
- Make sure your device supports *Bluetooth* connections (see page 14).
- Connect another device (see page 14).
- Reset the speaker (see page 36).

If you couldn't resolve your issue, see the table below to identify symptoms and solutions to common problems. You can also access troubleshooting articles, videos, and other resources at: [support.Bose.com/sl-home](https://support.Bose.com/sl-home)

If you're unable to resolve your issue, contact Bose customer service.

Visit: [worldwide.Bose.com/contact](https://worldwide.Bose.com/contact)

## OTHER SOLUTIONS

SYMPTOM	SOLUTION
<b>No power (battery)</b>	Battery may be in protection mode or discharged. Connect the speaker to a power source (see page 23).
<b>Speaker doesn't connect with device</b>	<p>If two devices are already actively connected to the speaker, you must disconnect one of them before connecting a third device.</p> <p>If the speaker is connected to a USB audio source when powered on, it doesn't reconnect to the most recently-connected <i>Bluetooth</i> devices. To reconnect to a device, use the device <i>Bluetooth</i> settings.</p> <p>Clear the speaker device list (see page 16). Delete the speaker from the <i>Bluetooth</i> list on your device, including any duplicate listings labeled LE (Low Energy). Connect again (see page 14).</p> <p>Visit: <a href="https://support.Bose.com/sl-home">support.Bose.com/sl-home</a> to see how-to videos.</p>
<b>Speaker doesn't respond to multi-press functions</b>	Vary the speed of presses.

SYMPTOM	SOLUTION
<b>No sound from device connected by <i>Bluetooth</i> connection</b>	<p>Use a different music source.</p> <p>If two devices are connected, pause audio on the first device and play audio on the other device.</p>
<b>No sound from device connected by USB cable</b>	<p>Make sure the speaker is selected as the audio output device in your USB audio source's settings.</p> <p>Use a different music source.</p> <p>Disconnect the speaker from your USB audio source. Make sure your source can play audio from its internal speakers or another audio output device.</p> <p>Disconnect any <i>Bluetooth</i> devices currently connected to the speaker, then try playing audio from your USB audio source again.</p> <p>If the USB cable is connected to a USB hub or adapter, try connecting it to your USB audio source directly.</p> <p>Connect a different USB audio source.</p> <p>If you're connecting a phone as a USB audio source, make sure that it has a USB-C port and supports USB digital audio. For more information, refer to your phone owner's guide.</p> <p>Disconnect the speaker from your USB audio source. In your source's settings, uninstall the speaker as an audio device. Reconnect the speaker to your source, then try playing audio again.</p>
<b>Poor sound quality from device connected by <i>Bluetooth</i> connection</b>	<p>Use a different music source.</p> <p>If two devices are connected, disconnect the second device.</p> <p>Disable any audio enhancement features on the device or music app.</p>
<b>Poor sound quality from device connected by USB cable</b>	<p>Play audio from a different application or music service.</p> <p>Close and re-open the application or music service.</p> <p>Play audio from content stored directly on your device.</p> <p>Connect a different USB audio source.</p>


SYMPTOM	SOLUTION
Delayed audio	<p>Play audio from a different application or music service.</p> <p>Close and re-open the application or music service.</p>
Speaker doesn't charge	<p>Make sure both ends of the USB-C to USB-A cable are secure (see page 23).</p> <p>Make sure you're using the Bose-provided USB-C to USB-A cable providing a minimum of 5V <math>\equiv</math>, 1.5A.</p> <p>Try another charging source and charging cable.</p> <p>If the speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again.</p> <p>Reset the speaker (see page 36).</p>

 
## RESET THE SPEAKER

If the speaker is unresponsive, you can reset it.

Resetting the speaker resets the product controls and reboots the speaker. It doesn't clear any device settings.

**NOTE:** Make sure the USB cable isn't connected to the speaker.

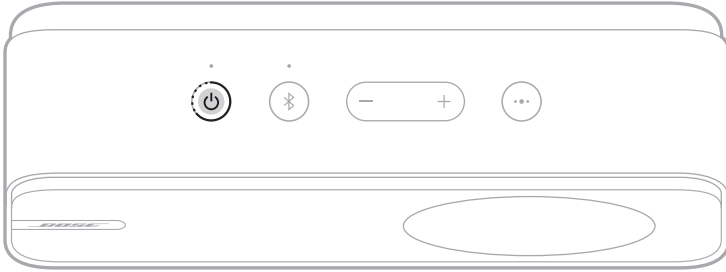

To reset the speaker, press and hold the Power button  for 8 seconds until you see the Power light turn off then glow according to the battery level (see page 25).




**NOTE:** If you're unable to resolve your issue, additional troubleshooting and support is available at: [support.Bose.com/sl-home](https://support.Bose.com/sl-home)

## RESTORE THE SPEAKER

 Factory reset clears connected devices and language settings from the speaker and returns it to the original factory settings.

1. Power on the speaker (see page 18).
2. Press and hold the *Bluetooth* button  and Multi-function button  for 10 seconds until the Power light quickly blinks white 3 times.

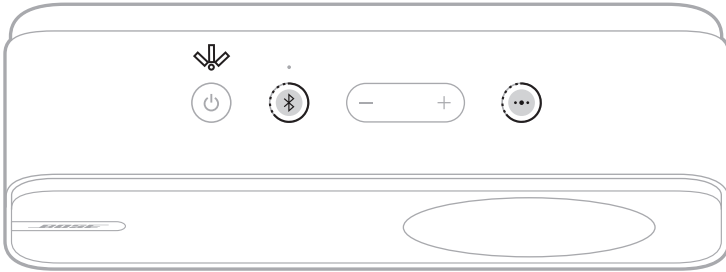

The Power light glows solid white, and the *Bluetooth* light blinks blue. A voice prompt announces the battery level, and then you hear "Ready to connect."

**NOTE:** If you're unable to resolve your issue, additional troubleshooting and support is available at: [support.Bose.com/sl-home](https://support.Bose.com/sl-home)



893045-0010